

# Y10

Body Camera



[User Manual](#)

# Index

---

|                                     |  |
|-------------------------------------|--|
| <b>1. Product Overview</b> — 3P     | <b>8. Emergency Alarm &amp; Flashlight</b> — 10P |
| 1-1. Package Contents               | 8-1. Emergency Alarm                             |
| 1-2. Button Layout                  | 8-2. Flashlight                                  |
| <b>2. Getting Started</b> — 4P ~ 5P | <b>9. Reset</b> — 10P                            |
| 2-1. Display Indicators             | 9-1. Reset Button                                |
| 2-2. Charging                       | <b>10. Indicators</b> — 11P                      |
| 2-3. SD Card Installation           | 10-1. Emergency Alarm Indicator                  |
| 2-4. Power On / Off                 | 10-2. Flashlight Indicator                       |
| 2-5. Screen Saver Mode              | <b>11. Specifications</b> — 11P                  |
| <b>3. Video Recording</b> — 5P ~ 6P | <b>12. Warranty</b> — 11P                        |
| 3-1. Normal Recording               |  |
| 3-2. Video Lock                     |  |
| 3-3. Night Vision Recording         |  |
| <b>4. Audio Recording</b> — 6P      |  |
| 4-1. Normal Recording               |  |
| <b>5. Snapshot</b> — 7P             |  |
| 5-1. Photo Capture                  |  |
| <b>6. File Management</b> — 7P      |  |
| 6-1. Viewing Saved Files            |  |
| 6-2. Deleting Saved Files           |  |
| <b>7. Menu</b> — 8P ~ 9P            |  |
| 7-1. General Settings               |  |

 
# 1. Product Overview

---


## 1-1. Package Contents



Main Unit

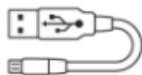

USB Type-C Charging Cable

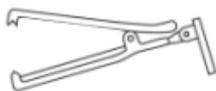 

Clip

---

## 1-2. Button Layout



1. Video Recording / Night Vision
2. Snapshot
3. Emergency Alarm / Flashlight
4. Status Indicator LED
5. Lens
6. Infrared LED
7. Flashlight LED
8. Emergency Warning LED
9. Light Sensor
10. Power Indicator LED
11. Microphone


12. Audio Recording
13. Power
14. Speaker
15. Charging Port
16. Display
17. Up / Important Mark
18. Menu / Confirm
19. Reset
20. Down / Playback
21. Back
22. .SD Card Slot

## 2. Getting Started

---

### 2-1. Display Indicators

1. Video Resolution
2. Photo Resolution
3. Number of Saved Files
4. Date
5. Available Recording Time
6. Battery Level
7. Audio Recording Indicator
8. Available Storage Space
9. Time

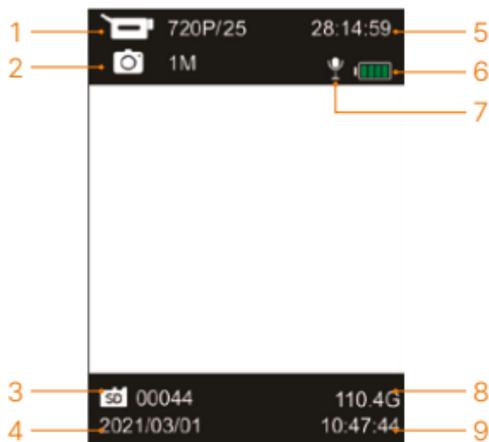

### 2-2. Charging

· **Low Battery Indicator** : When the battery level is low, the battery icon in the upper-right corner of the screen turns red. A notification sound will play along with the message "Low Battery!", and the device will automatically power off after 5 minutes.

#### · Charging the Device

- 1) Connect the device to a power adapter or power bank to charge.
- 2) Connect the device to a PC to charge.



USB Type-C  
Charging Port  
(DC 5V / 1A)

\*During charging, the operating status indicator lights green and the power indicator lights blue. When charging is complete, the indicators turn off.

\*A 5V / 1A low-speed charger is recommended.

(If mixed voltages such as 9V or 12V are used, fast charging may occur. Please use a charger that supplies 5V only.)

\*Fast charging may cause malfunction and may void the warranty.

## 2. Getting Started

---

### 2-3. SD Card Installation

Insert the SD card into the SD card slot at the bottom of the device as shown in the image on the right.



\*Supports microSD cards up to 512GB.

---

### 2-4. Power On / Off

- When the power is off, press and hold No. 13 (Power) to turn the device on.
  - When the power is on, press and hold No. 13 (Power) to turn the device off.
- 

### 2-5. Screen Saver Mode

- The screen automatically enters Screen Saver mode after 1 minute of inactivity.
- The screen enters Screen Saver mode 1 minute after recording starts.
- When the power is on, briefly press No. 13 (Power) to immediately activate Screen Saver mode.

## 3. Video Recording

---

### 3-1. Normal Recording

- Press and hold No. 1 to start recording when the power is off.
- Briefly press No. 1 to start recording when the power is on.
  - \*When recording starts, the red LED on No. 4 (Status Indicator) flashes.
  - \*A flashing red dot indicating recording status and the recording time are displayed in the upper-left corner of the screen.
- Briefly press No. 1 again to stop recording.
  - \*Recording is not available without an SD card inserted.
  - \*When recording stops, the recorded file is automatically saved.

## 3. Video Recording

---

### 3-2. Video Lock

· During recording, briefly press No. 17 (Up / Important Mark) to lock the current video.

\*Recording continues during this process.

\*Locked videos are not deleted during loop recording.

---

### 3-3. Night Vision Recording

· When the power is on, press and hold No. 1 (Video Recording / Night Vision) to switch to Night Vision (Infrared Mode).

· While recording in normal mode, press and hold No. 1 (Video Recording / Night Vision) to switch to Night Vision during recording.

· When Night Vision (Infrared Mode) is active, press and hold No. 1 again to return to Normal mode.

\*When Night Vision is enabled, the screen switches to black and white.

\*Night Vision can be activated automatically based on ambient light settings.  
(Refer to 7-1. General Settings.)

## 4. Audio Recording

---

### 4-1. Normal Recording

· When the power is off, press and hold No. 12 (Audio Recording) to start recording.

· When the power is on, briefly press No. 12 (Audio Recording) to start recording.

\*When recording starts, the status indicator flashes orange.

\*Recording is not available without an SD card inserted.

\*When recording stops, the recorded file is automatically saved.

## 5. Snapshot

---

### 5-1. Photo Capture

· When the power is on, briefly press No. 2 (Snapshot) to take a photo.

\*Shooting is not available without an SD card inserted.

\*Captured files are saved automatically.

## 6. File Management

---

### 6-1. Viewing Saved Files

· When the power is on, briefly press No. 20 (Down / Playback) to view videos, audio recordings, and snapshots.



---

### 6-2. Deleting Saved Files

· Select the file you want to delete, then press and hold No. 18 (Menu / Confirm) to delete the file.

## 7. Menu

---

Tip. In standby mode, briefly press No. 18 (Menu / Confirm) to enter the menu settings screen.

Tip. Briefly press No. 21 (Back) to return to the previous screen.

| 설정             |         |
|----------------|---------|
| Resolution     | 720P/25 |
| Photo Size     | 1M      |
| Photo Bursts   | Off     |
| Post-Record    | Off     |
| Compress Store | Off     |
| Loop Record    | Off     |

### 7-1. General Settings

- Resolution : Set the recording resolution. (Up to 1080p at 25fps)
- Photo Size : Set the snapshot (photo) size
- Photo Bursts : Enable continuous photo capture.
- Post-Record : Set the post-recording time.  
\*Recording continues for the set duration after stopping.
- Compress Store : Enable compressed storage.  
\*Reduces video quality and file size to store more recordings.
- Loop Record : Enable loop recording.
- Video Length : Set video file length during recording.
- Motion Detect: Enable motion detection.
- LCD Display : Set the screen saver mode.
- Auto Power Off : Set automatic power-off during standby.
- Key Tone : Enable or disable button sounds.

## 7. Menu

---

- Exposure : Adjust the exposure value (EV).
- Video Sound : Turn recording sound on or off.
- Device Volume : Adjust the system volume.
- Car Cam Mode : Enable Car Cam Mode.
- Anti-Virus : Enable virus firewall mode.  
\*When enabled, the firewall operates while connected to a PC via USB.
- Password : Set a password.  
\*Supports letters and numbers.  
\*When enabled, a password is required to access files.  
\*When connected to a PC, the password must be entered to access files.
- Change Password : Modify the existing password.
- Secret Mode : Enable silent mode.  
\*Button sounds, voice guidance, and indicator lights are disabled.
- IR Filter : Configure Night Vision (Infrared Mode).
- Device ID : Set the device identification number.
- Police ID : Set the device owner ID.
- Language : Set the system language.
- Human Speaker : Enable or disable voice guidance.
- Date / Time : Set the system date and time.
- Format : Format the SD card.
- Default Setting : Restore factory default settings.
- Date stamp : Enable or disable date and time stamping.
- Version : View firmware version information.

## 8. Emergency Alarm & Flashlight

---

### 8-1. Emergency Alarm

- Briefly press No. 3 (Emergency Alarm / Flashlight) to activate the alarm sound, and the red and blue LEDs will flash alternately.
  - Briefly press No. 3 again to turn off the alarm sound. Press once more to turn off the LEDs.
- 

### 8-2. Flashlight

- Press and hold No. 3 (Emergency Alarm / Flashlight) to turn the flashlight on.
- Press and hold No. 3 again to turn the flashlight off.

## 9. Reset

---

### 9-1. Reset Button

- If the device freezes or stops operating, press No. 19 (Reset) to reset the device.
  - Pressing No. 19 (Reset) will automatically power off the device and restore the default settings.
- \*Do not press the reset button with excessive force, as this may cause damage to the device.

## 10. Indicators

---

### 10-1. Emergency Alarm Indicator

- 1) Power On: Green LED on
- 2) Recording: Red LED flashing
- 3) Audio Recording: Orange LED flashing
- 4) Snapshot Capture: Red LED flashing

### 10-2. Flashlight Indicator

- 1) Charging: Blue LED on

## 11. Specifications

---

|                         |                              |                         |                   |
|-------------------------|------------------------------|-------------------------|-------------------|
| <b>Charging Time</b>    | Approx. 3 hours              | <b>Battery Capacity</b> | 1,501mAh          |
| <b>Battery Type</b>     | Rechargeable Lithium Polymer | <b>Recording Time</b>   | Approx. 7.5 hours |
| <b>Battery Material</b> | Lithium-ion Polymer          | <b>Voltage</b>          | 3.7V              |
| <b>Battery Model</b>    | 113535                       | <b>Weight</b>           | 104g              |
|                         |                              | <b>Size</b>             | 57 x 77 x 32 mm   |

## 12. Warranty

---

The warranty period is 1 year from purchase date.

Warranty is based on purchase receipt or purchase record.

---

**Seller** 4FACT Co., Ltd.

---

**Address** B-1304, 583, Yangcheon-ro, Gangseo-gu, Seoul, Korea

---

**A/S Contact** +82-2-6951-4404

**FACT**